


# CONNECTING SOLAR PANELS

1000 RIGID KIT

200 watt panel

ONLY FOR POINT ZERO ENERGY SOLAR PANELS.  
DO NOT USE this wiring diagram with any other solar panels.

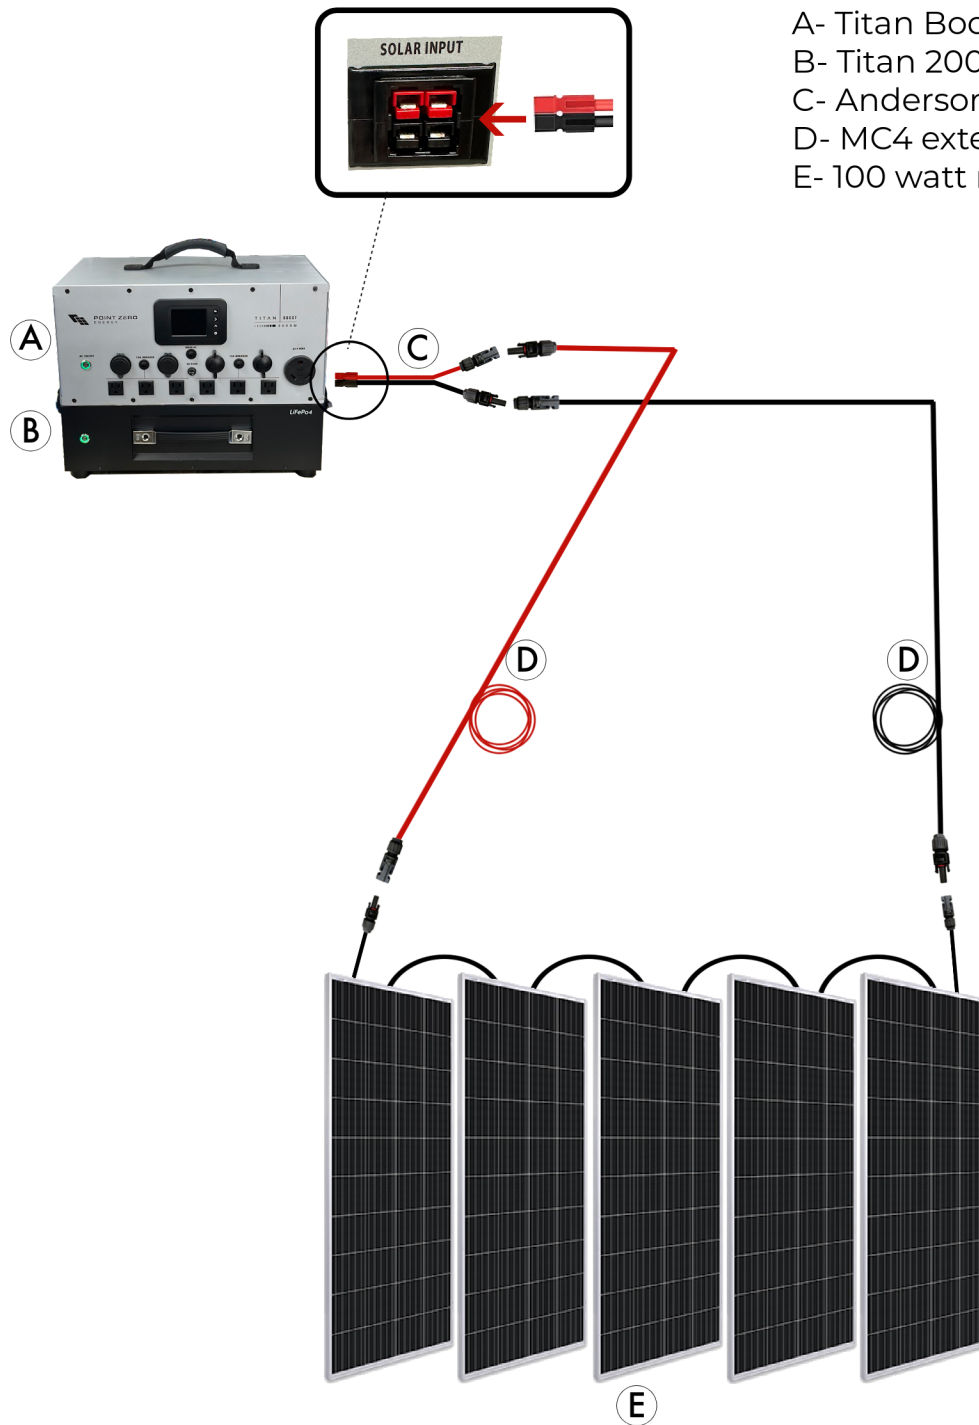

- A- Titan Boost Power Module
- B- Titan 2000 wh battery pack
- C- Anderson to MC4 adapter
- D- MC4 extension cable
- E- 100 watt rigid solar panels